

[See all 6 Products in Family](#)

## 152.4mm Clear Aperture 45R/55T, Infrared Pellicle Beamsplitter



Infrared (IR) Pellicle Beamsplitters

Stock #19-285 [CONTACT US](#)

⊖ 1 ⊕ €1.455<sup>00</sup>

**ADD TO CART**

| Volume Pricing |                               |
|----------------|-------------------------------|
| Qty 1-10       | €1.455,00 each                |
| Qty 11-25      | €1.235,00 each                |
| Need More?     | <a href="#">Request Quote</a> |

ⓘ Prices shown are exclusive of VAT/local taxes

### Product Downloads

#### General

Pellicle Beamsplitter **Type:**

#### Physical & Mechanical Properties

152.4 **Clear Aperture CA (mm):**

Pellicle **Construction:**

165.10 Diameter (mm):

Black Anodized Aluminum Housing:

2 +0.3/-0.2 Thickness ( $\mu\text{m}$ ):

## Optical Properties

Dielectric Coating:

45/55 @ 3000 - 5000nm Coating Specification:

1.5 Index of Refraction ( $n_d$ ):

45/55 Reflection/Transmission Ratio (R/T):

Nitrocellulose Substrate:

40-20 Surface Quality:

3000 - 5000 Wavelength Range (nm):

## Threading & Mounting

9.53 Mount Thickness (mm):

6-32 Mounting Threads:

## Regulatory Compliance

[Compliant](#) RoHS 2015:

[View](#) Certificate of Conformance:

[Compliant](#) REACH 241:



## Product Details


- 45/55 Average R/T Ratio from 3 - 5 $\mu\text{m}$
- No Ghost Images from Second Surface Reflections
- Eliminate Beam Displacement
- [Pellicle Beamsplitters](#) for the VIS-NIR Also Available

Infrared (IR) Pellicle Beamsplitters feature thin nitrocellulose beamsplitting membranes mounted in aluminum frames and are designed to have a 45R/55T beamsplitting ratio from 3 - 5 $\mu\text{m}$ . The thin nitrocellulose membranes eliminate second surface reflections and beam displacement while minimizing changes in the optical path length. The aluminum frames feature mounting holes on the underside of the frame to facilitate mounting and integration into OEM systems. Infrared (IR) Pellicle Beamsplitters are ideal for MMR applications including MMR imaging, infrared spectroscopy, flame detection, and general use with infrared detectors.

**Note:** The nitrocellulose membrane of these beamsplitters is very thin and fragile. The membrane should not be touched and cleaning should be done only with air. We recommend using an [air blower](#) as the force from compressed air may damage the membrane.

## Technical Information

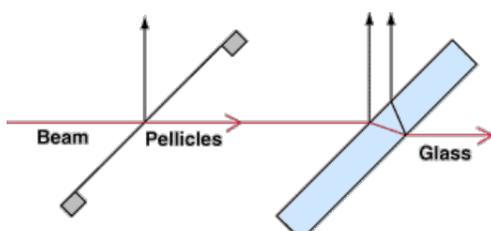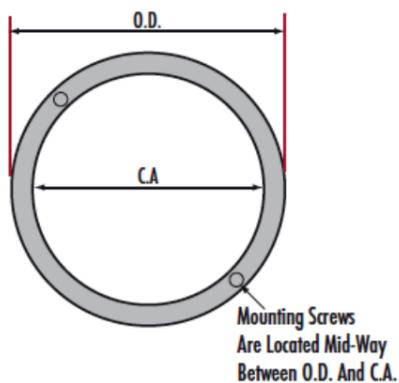

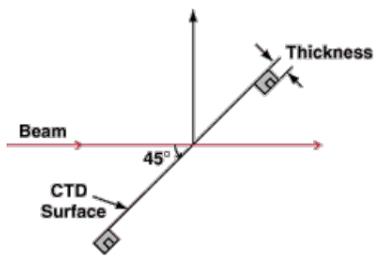

## Custom

Edmund Optics offers comprehensive custom manufacturing services for optical and imaging components tailored to your specific application requirements. Whether in the prototyping phase or preparing for full-scale production, we provide flexible solutions to meet your needs. Our experienced engineers are here to assist—from concept to completion.

Our capabilities include:

- Custom dimensions, materials, coatings, and more
- High-precision surface quality and flatness
- Tight tolerances and complex geometries
- Scalable production—from prototype to volume

Learn more about our [custom manufacturing capabilities](#) or submit an inquiry [here](#).