

25.4mm, ISP Optics Calcium Fluoride Equilateral Prism | CF-EP-25

See More by [ISP Optics](#)



Stock **#19-710** CLEARANCE **4 In Stock**

-

1

+

 €1.230⁰⁰

ADD TO CART

Volume Pricing	
Qty 1+	€1.230,00 each
Need More?	Request Quote

Prices shown are exclusive of VAT/local taxes

Product Downloads

SPECIFICATIONS

General

Equilateral Prism

Type:

CF-EP-25


Model Number:

Physical & Mechanical Properties	
±0.25	Dimensional Tolerance (mm):
85	Clear Aperture (%):
25.40	Length of Hypotenuse (mm):
25.40	Length of Legs (mm):
Optical Properties	
Uncoated	Coating:
Calcium Fluoride (CaF ₂)	Substrate: ☐
40-20	Surface Quality:
±10	Angle Tolerance (arcmin):
200 - 7000	Wavelength Range (nm):
0.2 - 7	Wavelength Range (μm):
2λ	Surface Flatness (P-V):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	Reach 240:

PRODUCT DETAILS

- CaF₂, Ge, and ZnSe Substrates
 - Ideal for Wavelength Separation
 - Designed for Use with Collimated Sources
 - Additional [Infrared Optics](#) Available
 - Due to material supply chain disruptions with germanium, there may be increased lead times and price changes on our germanium products. For more information, please contact our [customer service team](#).
- ISP Optics Infrared (IR) Equilateral Prisms, also referred to as dispersion prisms, feature three equal 60° angles and are used in wavelength separating applications. These prisms are available with calcium fluoride (CaF₂), germanium (Ge), or zinc selenide (ZnSe) substrates. CaF₂ equilateral prisms offer a low refractive index and broad transmission range from 0.2 – 7μm, making them ideal for applications requiring high transmission from the UV through the IR. Ge equilateral prisms are transmissive from 2 – 14μm with a high index of 4.002 at 11μm and are used in applications where the optical path length needs to be maximized. ZnSe equilateral prisms have high, even transmission from 0.6 - 18μm and are typically integrated with CO₂ laser systems that feature a 632.8nm HeNe alignment laser and 10.6μm output beam.
- Note:** Special care should be taken when handling Zinc Selenide as it is a toxic material. Always wear rubber or plastic gloves to avoid risk of contamination.

TECHNICAL INFORMATION

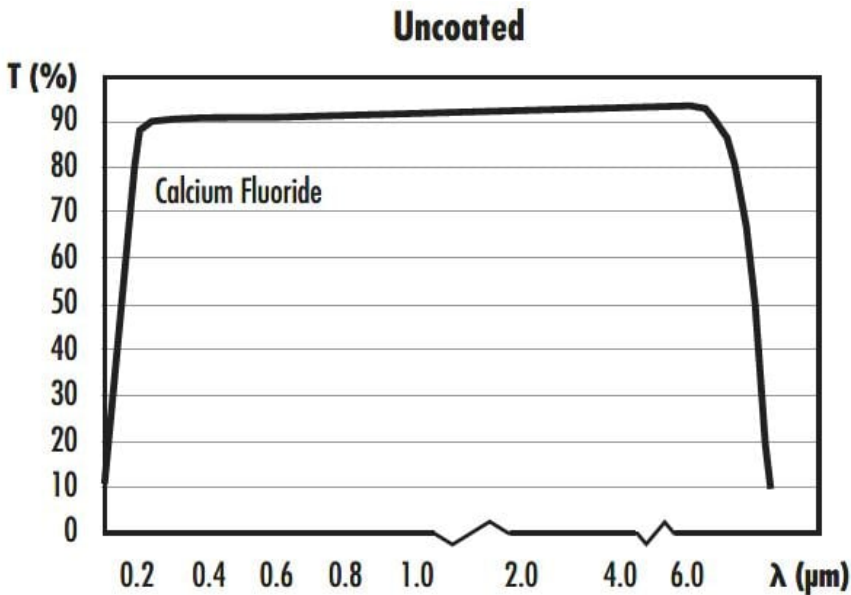

SPECIAL HANDLING

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools
