

[See all 12 Products in Family](#)

Laser Detection Wand IR



Laser Detection Products



Stock **#55-295** 20+ In Stock

-

1

+

€198⁰⁰

ADD TO CART

Volume Pricing	
Qty 1-5	€198,00 each
Qty 6-24	€188,00 each
Need More?	Request Quote

i Prices shown are exclusive of VAT/local taxes

Product Downloads

General	
Type:	Wand
Typical Applications:	808nm, 820nm, 830nm, 880nm, 960 - 980nm Laser Diodes, Nd:YAG, 1550nm Telecommunications
Physical & Mechanical Properties	

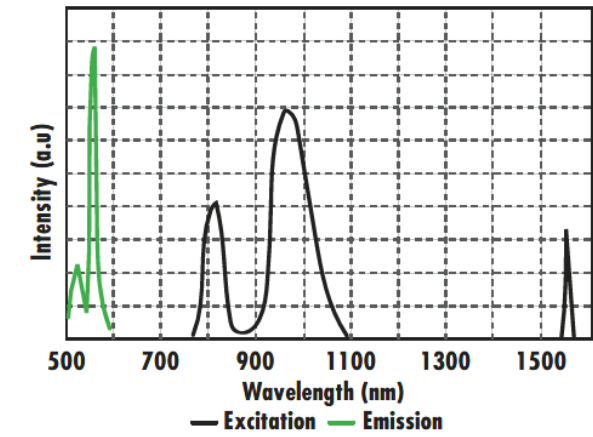
Active Area Diameter (mm):	
17.00	
Dimensions (mm):	
Disk: 25, Wand: 130 x35	
Optical Properties	
Wavelength:	
IR	
Emission Color:	
Green (550nm), other peaks at Red (673nm) and Blue (400nm)	
Stimulation Range:	
Band 1: 790 - 840nm Band 2: 870 - 1070nm Band 3: 1500 - 1590nm	
Minimum Stimulation, Pulsed:	
250 kW/cm ² @ 1064nm, 7ns, 10Hz	
Electrical	
Persistence (Stimulation Removed):	
800 μs	
Minimum Stimulation, Continuous:	
<2 μW/cm ² @ 808nm <175 nW/cm ² @ 960nm <100 μW/cm ² @ 1550nm	
Maximum Stimulation, Continuous:	
100 W/cm ² @ 1064nm	
Maximum Stimulation, Single Pulse:	
35 MW/cm ² @ 1064nm, 7ns	
Regulatory Compliance	
Reach 191:	
Compliant	
RoHS 2015:	
Compliant	
Certificate of Conformance:	
View	

Product Details

- Full Spectrum Coverage: UV, VS, IR Series
- 3 Mounted Formats Have Safe, Non-reflective Encapsulation
- Unique, No Pre-charge for IR Detection and No Fading During Use
- Flexibility for Either Transmission or Reflective Viewing

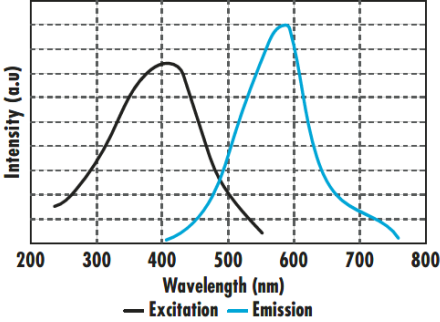
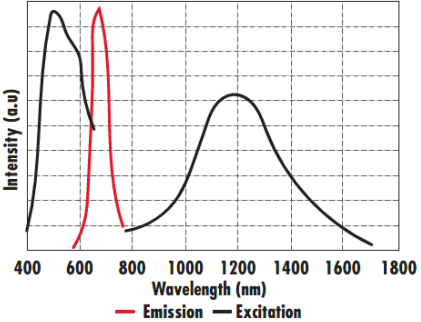
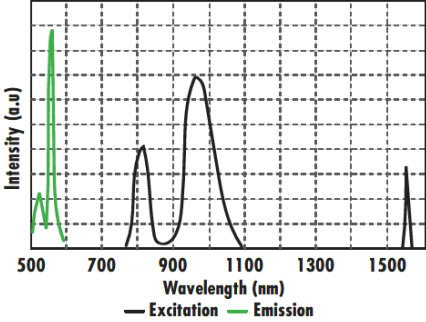
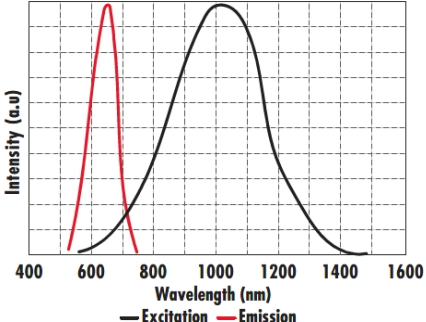
Laser Detection Products offer UV, visible, and IR laser users' greater performance and safety. They reduce problems associated with beam visualization, profiling, and alignment in many applications. Each range is available in three formats. Laser Detection Products' laminated credit card style is for low-power sources and reflective viewing only. The 25mm disk and clip-on wand style is used when frequent component positioning is required. The removable disk is positional at an optics location to enable precise alignment, while the wand format permits handling into the beam path. The optical bench-mountable head format has a large active area and ¼-20 threaded mounting for standard English post/post holder integration.

Technical Information



IR Detection Products

Laser Detection Products				
	UV	VS	IR	NIR
Stimulation Range	250 - 550nm	Band 1: 400 - 640nm	Band 1: 790 - 840nm	700 - 1400nm
		Band 2: 800 - 1700nm	Band 2: 870 - 1070nm	
			Band 3: 1550nm	

Typical Applications	HeCd, Ar-Ion, tripled Nd:YAG, etc.	Ar-Ion, HeNe, HeCd, Nd:YAG, etc.	808nm, 820nm, 830nm, 880nm, 960 - 980nm Laser Diodes, Nd:YAG, 1550nm telecommunications	Nd:YAG, Fiber Laser
Emission Color	Yellow (580nm), Broadband (490nm - 700nm)	Orange/Red (655nm), Broadband (600 - 730nm)	Green (550nm), other peaks at Red (673nm) and Blue (400nm)	Orange/Red (655nm)
Persistence (Stimulation Removed)	6 s - 4 mins (dependent on ambient light)	Visible: 0.5 - 3 s (dependent on ambient light) IR: <0.5 s	800µs	<50 ms
Continuous (Minimum Stimulation)*	<1nW/cm ² @ 450nm & 365nm	<1nW/cm ² @ 450nm <25µW/cm ² @ 950nm	<2µW/cm ² @ 808nm <175 nW/cm ² @ 960nm <100µW/cm ² @ 1550nm	8µW/cm ² @ 1064nm
Pulsed (Minimum Stimulation)*	<8W/cm ² @ 337nm, 4ns, 20Hz, <40W/cm ² @ 337nm, 4ns, 1Hz	2 kW/cm ² @ 1064nm, 7ns, 10Hz	250 kW/cm ² @ 1064nm, 7ns, 10Hz	N/A
Continuous (Maximum Stimulation)	100W/cm ² @ 512nm (all formats)	100W/cm ² @ 512nm (all formats)	100W/cm ² (all formats)	100W/cm ² @ 1064nm (estimated)
Single Pulse (Maximum Stimulation)	130MW/cm ² @ 337nm, 4ns (card only) 850MW/cm ² @ 337nm, 4ns (other formats) 60MW/cm ² @ 1064nm, 7ns (all formats)	130MW/cm ² @ 337nm, 4ns (card only) 850MW/cm ² @ 337nm, 4ns (other formats) 60MW/cm ² @ 1064nm, 7ns (all formats)	35MW/cm ² @ 1064nm, 7ns (all formats)	35MW/cm ² @1064nm, 7ns (estimated)
				

*Measured in darkened conditions